


RECLAIMED WOOD PANELS

INSTALLATION TIPS

- Carpentry or wood installation tools must be used, wet saw usage is not recommended.
- Substrate wall looks best painted a dark color since it may be visible through the knot holes.
- Cut the mesh from around the knot holes so it is not visible on the front of the application.
- Bostic Climb, Bosti-Set or equivalent adhesive used for wood installation.
- Use small finishing nails for additional support.

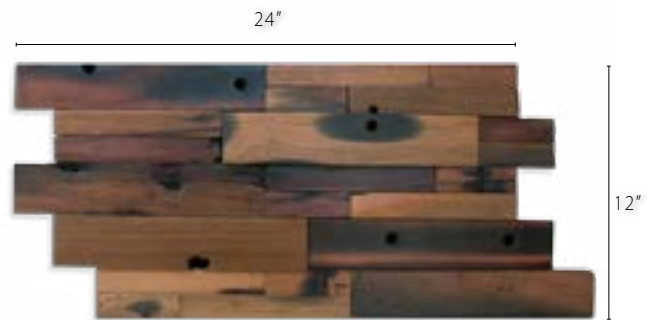

For additional information and project photos visit www.realstone.com